



Mini Portable MPEG-4 DVR

# User Manual

## Security Instruction



**Before using this product, please carefully read the instructions it will let you enjoy various features of the product**

Keep your battery charged,

If Battery is low recording audio and video or transfer files may cause system errors, resulting in loss of data!

**Don't not tamper with unit!**

Otherwise there will be an electric shock hazard!

Touch-DC converter components May lead to electric shock



In order to prevent the use of DC converter operation when questions, please read the [Manual]

Note:

Avoid the use of this product contact with water or other liquids, or else there will be an electric shock or fire danger! Your safety, please use the Product to provide power converters (for the use of non-provided converter damage caused by products, manufacturers takes no responsibility for), please note I would like to use with the converter in line with the socket, otherwise there will be an electric shock or fire danger to DC converter plug is firmly inserted into a power outlet.

## Security Instruction

Do not use a damaged battery or charger

Do not allow battery charging time exceeds the allotted time

At first the use of batteries or battery unused in a few months after the reuse, please fully charge the battery.

for the battery is fully charged, the use of its fully discharged, then recharge in order to ensure its longer life,

At short-term use after the battery will shorten battery life, in this case, repeatedly for the battery is fully charged and then fully discharged several times, so you can use the battery a longer period of time

Overcharging or excessive discharge will shorten the life of rechargeable batteries

When the rechargeable battery life than the use of a new rechargeable battery short time, replace the new rechargeable batteries.

because of rechargeable batteries are consumables, so battery life will be shortened over time.

Careful not to let any conductor (such as necklaces, bracelets, etc.) to enable access to DC converter or a rechargeable battery side short-circuit, or may cause electric shock or fire

## Product features

Multiple record mode: Motion detect record/manual record  
Storage full over writes automatically

Fast video recording by one key function

Recording, power ON/OFF via remote control

Real time Display/Recording at 30fps with date and time stamp

960 \* 240 high-definition 2.5/2.7-inch LCD screen

Support 32GB TF memory card

Video resolution: 800\*600/640 \* 480/320 \* 240 optional


Video frames 10-30 frames / second optional

High-speed USB2.0 interface.

Audio and video input / output;

Configuration removable high-capacity lithium battery, 5 hours of continuous playback,  
video recording up to 2 hours standby

## Parts Introduction

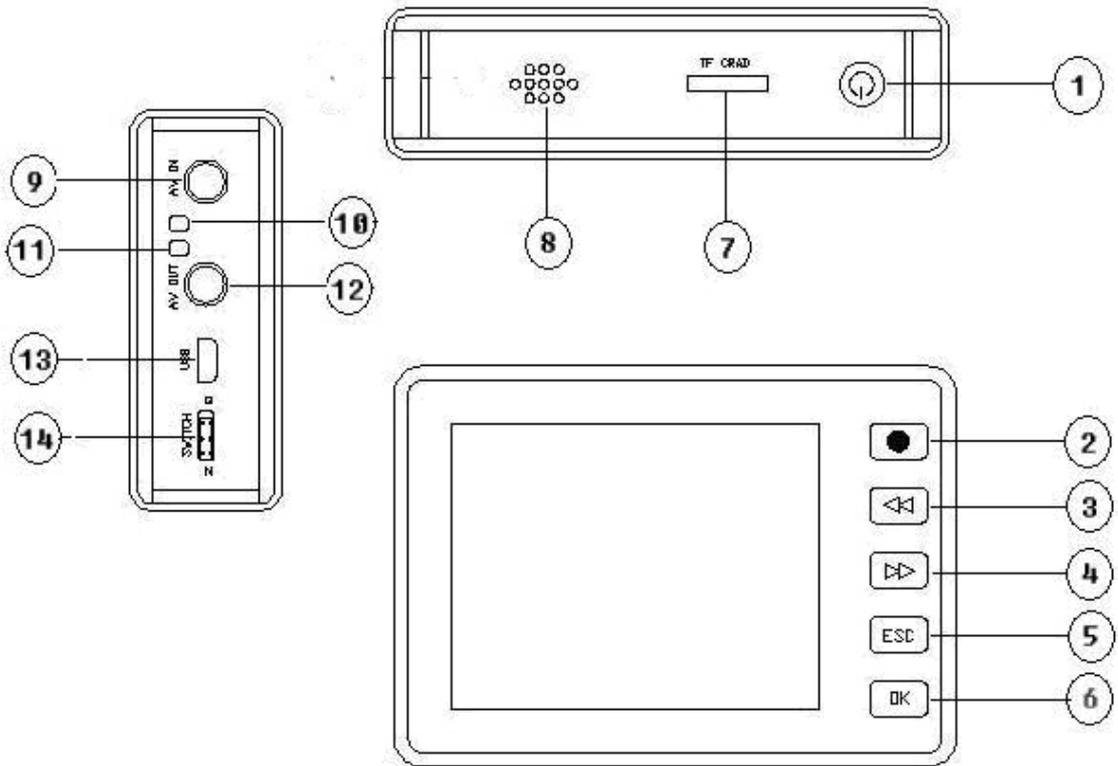

1. Power Switch

2. Record button

3. Select Key

4. Select Key

5. ESC button

6. Enter button

7. TF card slot

8. Loudspeakers

9. Video / audio input

10. Charging Indicator

11. Recording Indicator LED

12. Video / audio output

13. USB port

14. Mode switching key

## Remote controller Introduction



**1. Power ON**

**2. Power OFF**

**3. Key ring**

**4 . LED Indicator**

## User Guide

Hold the Power On/Off button  for 3 Seconds to turn On/Off the Device.

Interface Diagram:



Mode selection

- Video Record - Video Recording Mode
- Audio recording – Audio recording mode
- playback - Player for / Video / Audio/ Photo Mode
- System Setting - System Settings

## The use of model selection

### ■ Video Record Mode --

- At the main menu select [video Record] icon to enter the video mode



1. Into the (video Record) mode. Screen appears to the camera collected images,
2. By [OK] button to enter the [Record Settings], then [Menu] key to exit. (Note: this function should not operate simultaneously at the next video). This feature please refer to[Record Settings] Operational Guidelines.
3. According to [●] key to record the audio and video camera images, In the recording studio when the left pulse of flashing lights.  
Press ESC button to quit recording.  
Quit recording after recording the file will be automatically stored in the (playback -video) file folder.  
Man-in memory, the recording will automatically stop and automatically stored in the (playback- video) file folder.

## Mode Selection

- Audio Recording mode - Select [ Audio Record ] Icon in the Main Menu



Operational Guidelines:

- . The main menu to enter the (Audio recording) mode appears when the screen interface to record instructions.



By recording [●] button to record the local microphone to receive all the audio. In the recording studio when the left pulse of flashing lights.

Press [ESC] key to stop recording.

Quit recording after recording the file will be automatically stored in the (playback- audio) file folder. Man-in memory, the recording will automatically stop and automatically stored in the (playback- audio) file folder.

## Mode Selection

- Playback Mode - Select [ Playback] Icon in the Main Menu



### Instruction:


1. Once inside [Playback], you will be able to see a list of recorder file. Using the  select the require

file that you want to watch, then press [OK] button to start playing the video.

To Delete a file, Select a file that you wanted to erase, Press [Menu] Button, choose [Delete], and the [OK], you will be able to delete the selected file.

## Mode Selection

- System Configuration Mode - At the main menu select [Settings] icon to enter the system settings mode

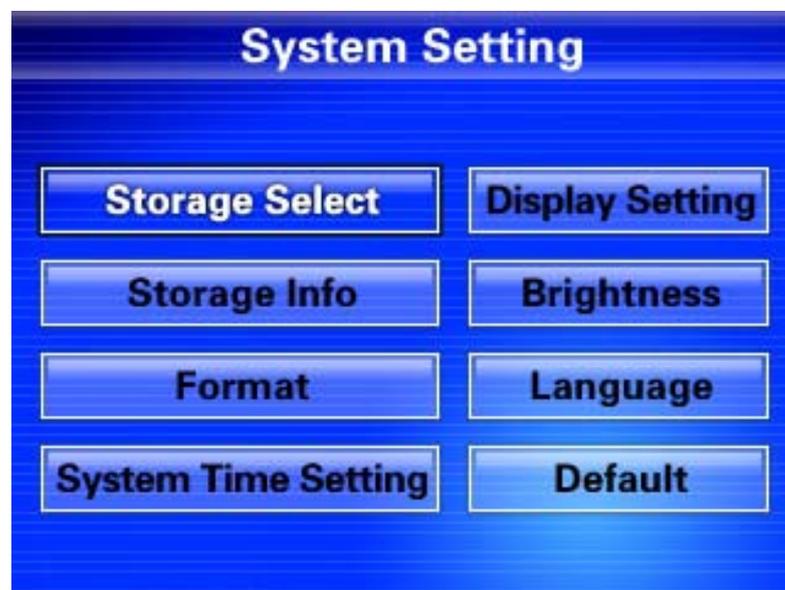

### Operational Guidelines:

Use keys to select and then click [OK] to enter sub-menu.

**1. Storage select - set the video store directory**

Note: The system defaults to the SD card, the machine did not insert the SD card, the system automatically prompts: Please insert the SD card

**2. Storage info - has been used to check the memory status**

Note: The system defaults to the SD card memory status, this machine is no SD card inserted, the system automatically prompts: Please insert the SD card

**3. Formatting - set storage format**

- YES

- NO

(One was confirmed that all data will be deleted.)

**4. System Time settings - set the system date and time (recommended prior to first use the set)**

**5. Display settings - set AV Output**

- LCD output

- TV\_PAL output

- TV\_NTSC output

**6. Brightness – Setting for the system Brightness**

Button to reduce the brightness or increase the brightness.

**7. Language settings - set the system language**

- English

- 简体中文

- 繁體中文

- Russian

(In the updated version will be more language selection)

**1. 8. Default – Setting for reset the factory original setting**

- Yes

- No

- Video settings - in the [video] mode, press [OK] button to enter the [Video Settings] menu, press [Esc] key to exit.



Operational Guidelines:

Use keys to select and then click [OK] to enter sub-menu.

#### 1. Video Resolution - Set the video resolution

(Video information screen size and great little noodle file settings depending on the resolution)

- 800 x 600
- 640 x 480
- 320 x 240

#### 2. switch settings - set DIP switch-Q position

##### - Lock and Standby

In this mode selection: In the case of shutdown when the Slide Switches Q assigned to the location of the shortcut to start the machine automatically to enter the video mode, the screen appears to the camera images collected at the same time display backlight lamp clearance out, open the lock button function. (DIP switch back position N, the machine back the video mode, all functions return to normal)

At any boot mode DIP switch assigned to put the location of Q: The display's backlight to turn off lights, open the lock button function. (N Slide Switches back position, the screen backlight lights opened out, key lock feature off, return the original model.)

#### **- Lock,Standby and Record Video**

Selection in this mode: Regardless of the machine in any status under the DIP switch assigned to the location of Q, the faster boot drive (shock oscillation time) and enter the video mode to record audio and video camera images of the left video lantern light, while the screen backlight to turn off lights, open the lock button function. (DIP switch back position N, the machine (a vibrator vibration twice) the left side of the video after the lights went out save by recording just the audio and video camera data to the screen (playback- video) file folder and then shutdown .

#### **- Lock,Standby and Record Audio**

Selection in this mode: Regardless of the machine in any status under the DIP switch assigned to the location of Q, the faster boot drive (shock oscillation time) and enter the recording mode to record the microphone to receive all the audio, the left recording pulse of flashing lights. At the same time, the backlight display lights are switched off, open the lock button function. (DIP switch back position N, the machine (a vibrator vibration twice) just after the preservation of audio data to recording (playback- audio) file folder and then shutdown.

#### **- Motion detect**

Selection in this mode: no matter which the state it's in, when you switch to the Q position, the device will launch up quickly. (Vibrate for once at the same time) And enter video record mode.

Video record mode: Change to motion detection state. Start to record dynamic video and audio. The record light on the left side will turn on.

Note: In motion detect mode,. There will be a yellow logo M on the upper left corner. It will automatically record video when any motion detected. 20 seconds after motion stops, the device will stop recording automatically and save file just then recorded to the archive.

Note : can't connect USB with computer under Q mode at the same time

### **3. Record Time - settings Record Time**

- 5 Minute
- 15 Minute
- 30 Minute

### **4. Vibrating - set the Vibrating**

- On

- Off

## 5. FPS - set the video frame rate when the data information

(Video data quality and file sizes depend on the quality of frame rate settings)

- 10FPS

- 20FPS

- 30FPS

## 6. Remote Control - Set the remote control function

### - Remote control OFF

Selection in this mode: the machine from the controller to control

### - Boot and Record video

Selection in this mode: the machine status at shutdown by remote control under the **(Power ON)** button, the machine faster boot (vibrator vibration once) and enter the video mode to record audio and video camera images, the left video lantern light At the same time, the screen's backlight to turn off lights, open the lock button function.

**(Power OFF)** button by remote control, the machine (a vibrator vibration twice) the left side of the video after the lights went out save by recording just the audio and video camera data to the screen (playback- video) file folder and then shutdown

### - Boot and record audio

Selection in this mode: the machine status at shutdown by remote control under the **(Power ON)** button, the machine faster boot (vibrator vibration time) to enter the recording mode to record the microphone to receive all the audio , at the left side of recording when recording pulse of flashing lights. At the same time, the backlight display lights are switched off, open the lock button function.

**(Power OFF)** button by remote control, the machine (a vibrator vibration twice) just after the preservation of audio data to recording (playback- audio) file folder and then shutdown.

Note: not at Slide Switches Slide Switches Q appropriated for state use.

## **7. Standby settings - standby time video settings**

- 10 second

- 20 second

- Never

Note: This function only at the status N Slide Switches can be achieved.

Note: not at Slide Switches Slide Switches Q appropriated for state use.

## **8. Overwrite Enable - storage replication function to automatically set**

- ON

ON mode selection: the system default local storage is set to automatic replication, when the memory storage of video data at the remaining space 1MB, the machine will delete the earliest days of video information, then continue to the video storage, preservation the latest video information.

Note: This function must be careful to use to open the automatic replication feature will be automatically deleted when the first video information!

- OFF

Turn off selection mode: the local system will be at the remaining storage space 0MB, stop recording, then the screen shows the storage space is full tips, issued a vibrator storage space is full signal: (signals: Indirect non-stop vibration)

## **Includes**

1. Mobile Video Recorder \* 1PCS

2 MINI CAMERA

3. DC5V 2A charger \* 1PCS

4. User Guide \* 1PCS

5. USB PC Line \* 1PCS

6. AV Line \* 1PCS

7. Headset \* 1PCS

8. Lithium electric 1800MA \* 1PCS

## Parts Instruction

<b>LCD screed</b>	<b>2.5 inch /2.7 inch LCD</b>
<b>Video output mode</b>	<b>NTSC / PAL</b>
<b>Video mode</b>	<b>NTSC / PAL</b>
<b>Image resolution</b>	<b>800*600/640*480 / 320*240</b>
<b>Video compact format</b>	<b>AVI</b>
<b>Frequency range</b>	<b>20HZ-20KHz</b>
<b>Output channel</b>	<b>Stereo</b>
<b>Earphone output</b>	<b>L 20MW+R 20mW [16O](Max volume)</b>
<b>Loudspeaker</b>	<b>1.5W</b>
<b>Flash Moemory</b>	<b>128MB</b>
<b>Memory card</b>	<b>TF memory card</b>
<b>IBM-PC</b>	<b>Windows 98SE,ME,2000,XP</b>
<b>USB</b>	<b>USB 2.0</b>
<b>Language selection</b>	<b>Chinese / English</b>
<b>Power adapter</b>	<b>DC 5V 2A</b>
<b>Built-in battery</b>	<b>Li-ion battery 1800Mah</b>
<b>Video recording</b>	<b>≥2 hours</b>
<b>Player equipment</b>	<b>≥5 hours</b>